Mini Reflex Red Dot Sight User Manual



INTRODUCTION

This sight is capable ofbeing mounted to variable and fixed magnificationo ptics. This gives you a fast and lightweight reflex option to engage in CQB scenarios, while being able to quickly switch back to a magnifed optic for longer range shots, Ifyou're looking for the ultimate lightweight reflex sight for your rife, this product is perfect for you. New casy to use adjusters with audible clicks allows for guick windage and elevation adjustments. With available brightness settings. The reticle can be adjusted manually by clicking the plus or minus buttons to the left of the sight. Among the available brightness settings, the reticle can be adjusted by clicking the plus or minus buttons in the lower left corner of the sight. Adjust the reticle manually.

INTRODUCTION

- . Tough aircraft grade aluminum
- Versatile mounting platforms
- . Lightning fast target acquisition
- . Unmatched durability
- . Adjustable reticle brightness

INTRODUCTION

Reticle Color	Red	
Magnifieation	1X	
Sight Window	0.93*0.66in	
Dimensions (LxWxH)	1.78*1.11*1.0in (1.41)	
weight	56g	
imination Souree	LED Powered by a CR2032 Lithium Batte	
Waterproof Rating	IPX7	
usage time	50000 Hour	
illumination	Power on; press any key to turn on the computer; turn off the computer; press any key Press and hold for three seconds to turn off the machine. 9 levels for daytime use 2 NA level, a total of 11 levels of brightness, motion sensing Sleep for 2 minutes, automatically shut down after 1 hour	

INTRODUCTION ELEVATION ADJUSTMENT SCREW WINDAGE ADJUSTMENTSCREW	LENS INCREASE BI BUT		REW
			STEEL COIN
3VCR 2032 BATTERY	LENS CLEANING CLOTH	RUBBER COVER	WRENCH 3

DIAGRAM

It is recommended to have the red dot sight mounted by a professional gunsmith. However, if attempting to mount the sight without profession alassistance, pls read and strictly adhere to the following directions.WARNING! Never attempt to mount the sight on a loaded frearm. Always check that the frearm is unloaded and free of amunition. Due to the unlimitedeve relief of the sight, allow at lease 3 inches of clearance between the endofthe LED, mirror housing and your cye when shooting.

- 1. The red dot sight comes with a weaver/picatinny mount.
- 2. Unloaded the weapon. Remove the bolfring pin to ensure the weapor incapable offring.
- 3. Install the red dot sight onto a weaver or picatinybase. Once the alignmentis checked, tighten the mounting screw, Take care not to over tiahten.
- 4. Ensure the red dot sight proves the desired cye relief
- 5. Check the alignmient and position, then boresight the sight.

BORESIGHTENING THEREDDOT

Preperlyinstalling red dot sight requires boresighting. It can and shouldbe done by the user himselfin order to Icearn basic rules ofballisties. Theradiant can be regulated using the turret knobs. They allow to adjust theimpact point of projective vertically and horizontally.

OPERATING WINDAGE AND ELEVATION **ADJUSTMENT**

Once the scope has been sighted in, it is time to reset the windage and clevation knobs back to zero. Adjust the reticle accordingly by changing theelevafion and windage adjustments with the tools provided until the reticelis zeroed

INSTALLING BATTERY

This reflex sight uses one 3V CR2032 lithium battery. Should the reticlegrow dim or not illuminate, the battery needs to be replacedUsing the Allen wrench(provided in package) to remove two Torx screws(see diagram pointing Torx screws). Turn the sight upside down to remove the bottom part of sight, Replace it with 3VCR2032 lithium battery.







2.Unscrew the battery cover



3 Put in the new battery

MAINTENANCE

Proper maintenance of the red dotis recommended to ensure longevity. It is recommended that when the red dot hecomes digty, it is wiped down with adry or slightly damp cloth. Bow dirt and debris offall optics and then cleanthe lenses with a lens cleaning cloth.

5 6

2